




LED light


If you can't let the lights work successfully, please check the

- 1. Please check the direction of the connect, try it in the opposite direction, according to the following picture.
- 2. Please check the remote control, it need you to tear down the plastic septum before use it.
- 3. Don't let the remote control too far from the receiver, make sure there is no obstruction between them.

The LED light is located at the board 6

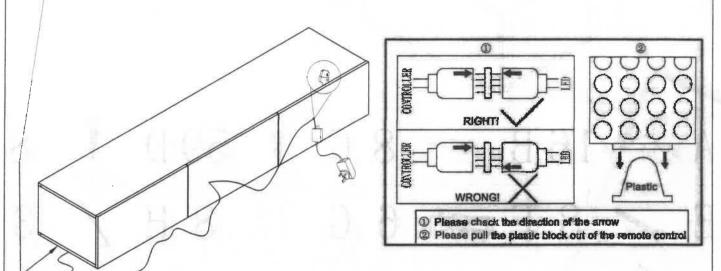

Remark: These two buttons are invalid because the product cannot adjust the brightness of the light.

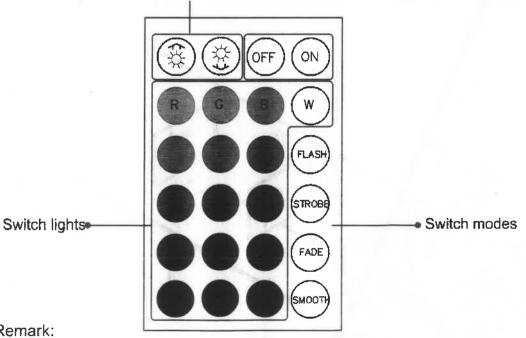

Remark:

The color of the lamp bead is the same as the button on the remote control, but there will be some changes after scattering through the glass.

x1

