ASSEMBLY INSTRUCTIONS

DESCRIPTION: SHERPA BED WITH SPEAKER

ITEM: 9010 - Q-BED

Caution: Please read instructions thoroughly before unpacking assembly parts. Sharp, exposed staple tips can cause injury, therefore, for your protection, please remove any exposed staple used in packing.

1. We recommend that you should assemble this product with the assistance of another person; this will make assembly easier, and will help to eliminate damage to the product or injury to persons during assembly.
2. Be sure to check all packing materials carefully for small parts that may have come lose inside the carton during shipment.
3. Please do not over tighten screws or bolts until the assembly is completed.
4. Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.

## TOOLS REQUIRED (Not provided)

PHILLIPS SCREWDRIVER

HARDWARE LIST :

No.	Description	Sketch	Size	Quality
A	Bolt		Ø$\frac{5}{16}$" x 60mm	8PCS
B	Bolt		Ø$\frac{5}{16}$" x 45mm	8PCS
C	Bolt		Ø$\frac{1}{4}$"x 20mm	16PCS
D	Bolt		Ø$\frac{1}{4}$"x 35mm	4PCS
E	Spring Washer		Ø$\frac{5}{16}$"	16PCS
F	Flat Washer		Ø$\frac{5}{16}$"	16PCS
G	Spring Washer		Ø$\frac{1}{4}$"	20PCS
H	Flat Washer		Ø$\frac{1}{4}$"	20PCS
J	Allen Key		M4	1PC
K	Screw		M4x 35mm	28PCS
L	Metal Hook Left			2PCS
M	Metal Hook Right			2PCS

PART LIST :

|			
(1)	Headboard		1PC
(2)	Headboard Leg		2PCS
(3)	Footboard		1PC
(4)	Side Rail (Cap)		2PCS
(5)	Side Rail (Outer Panel)		2PCS
(6)	Side Rail (Inner Panel)		2PCS
(7)	Side Rail (Bottom Panel)		2PCS
(8)	Slats roll		2Set
(9)	Center Rail		2PCS
(10)	Center Support Leg		4PCS
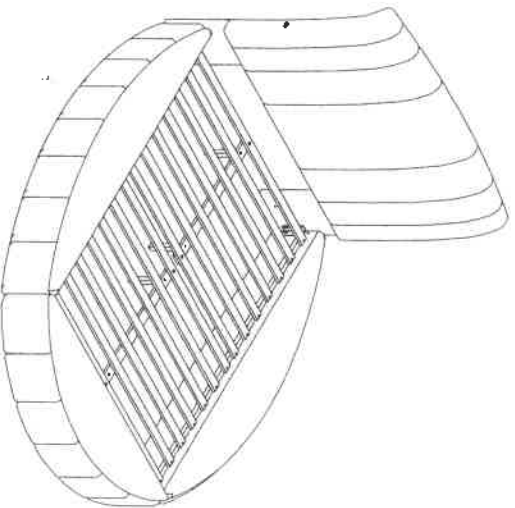
ASSEMBLY INSTRUCTIONS

DESCRIPTION: SHERPA BED WITH SPEAKER

ITEM: 9010 - Q-BED

Step 1: Assemble Headboard (1) with Headboard Legs (2).
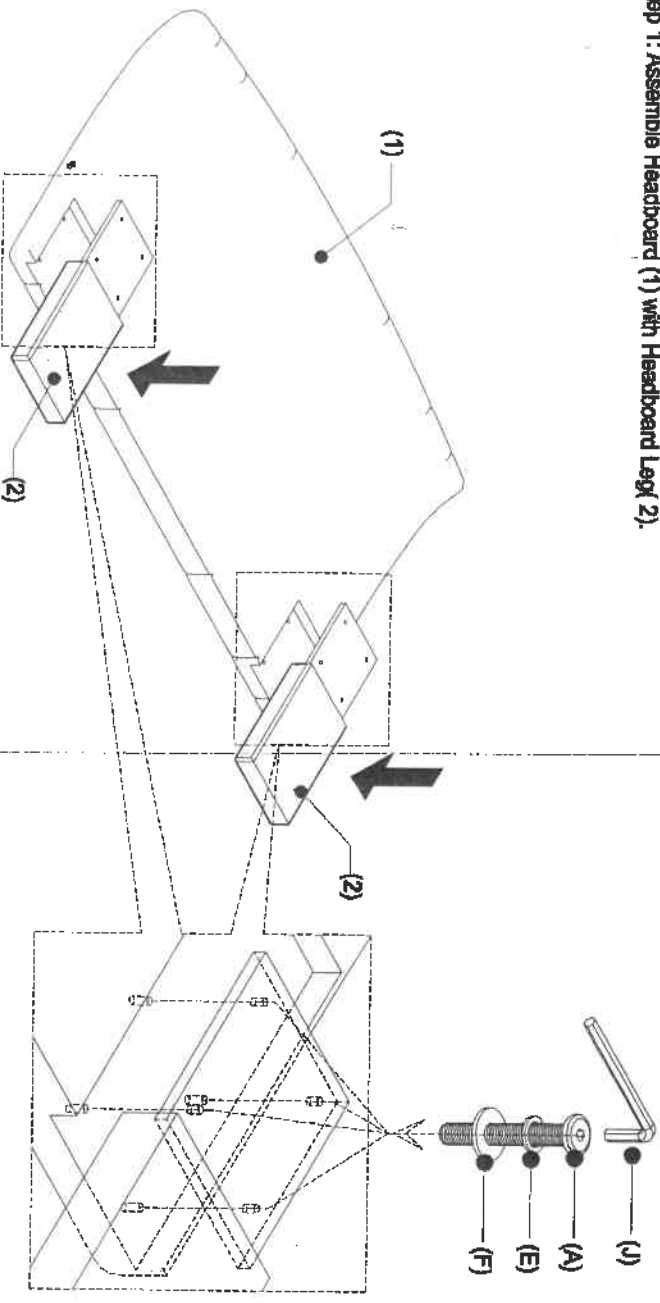
A	Bolt	Ø5/16" x 60mm	8PCS
E	Spring Washer	Ø5/16"	8PCS
F	Flat Washer	Ø5/16"	8PCS
J	Allen Key	M4	1PC

Step 2: Assemble Side Rail (Outer Panel) (5) with Side Rail (Inner Panel) (6).
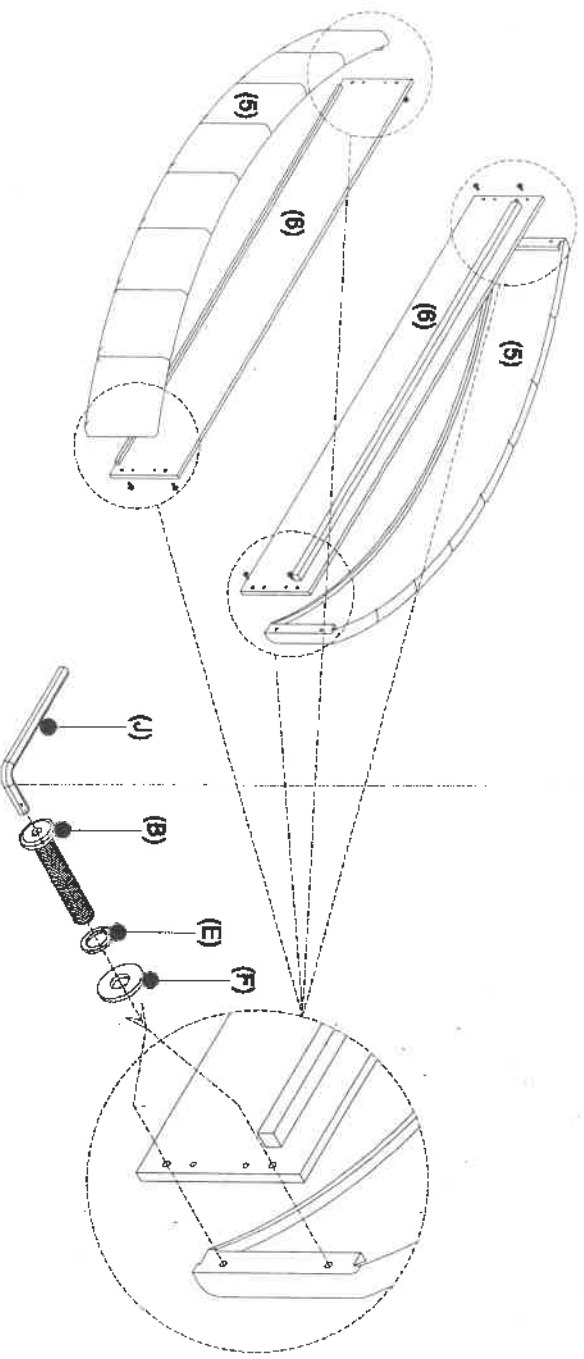
B	Bolt	Ø5/16" x 45mm	8PCS
E	Spring Washer	Ø5/16"	8PCS
F	Flat Washer	Ø5/16"	8PCS
J	Allen Key	M4	1PC

MADE IN VIETNAM

Step 3: Assemble Side rail with Metal Hook Left (L) & Metal Hook Right (M), Place Side rail (Bottom Panel) (7) inside the of Side rail storage.

C	Bolt	Ø⅜"x 20mm				8PCS
G	Spring Washer	Ø¼"				8PCS
H	Flat Washer	Ø¼"				8PCS
J	Allen Key	M4x 4"L				1PC

L	Metal Hook Left			2PCS
M	Metal Hook Right			2PCS

Step 4: Place Side rail (Cap) (4) on top of the side rail storage.

Side rail(Cap) bottom
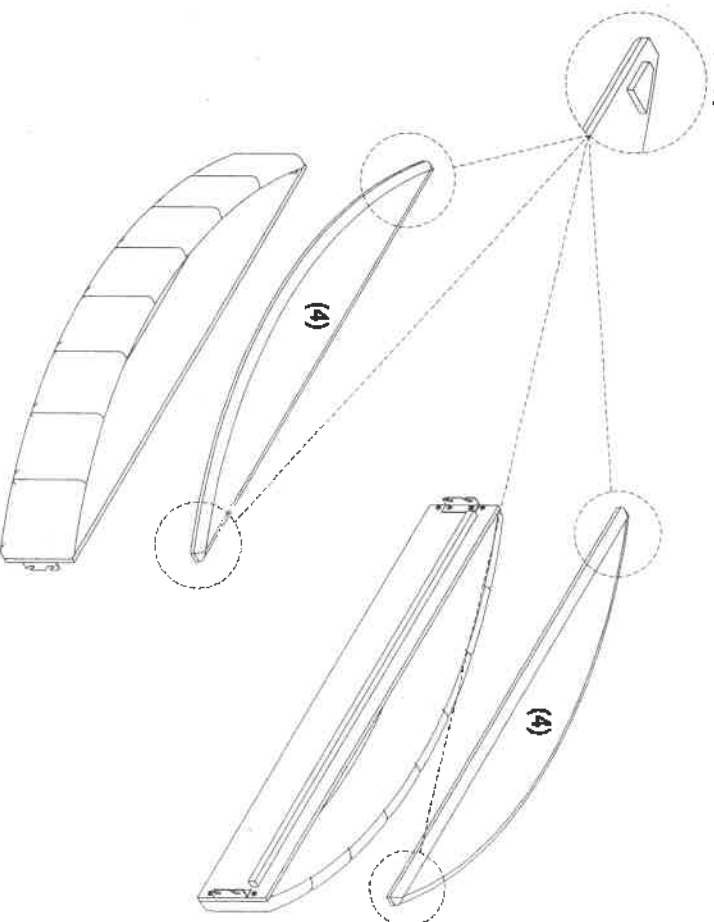
Step 5: Assemble Center Rail (9) with Slat roll (8) and Center Support Leg (10) with Center Rail (9).
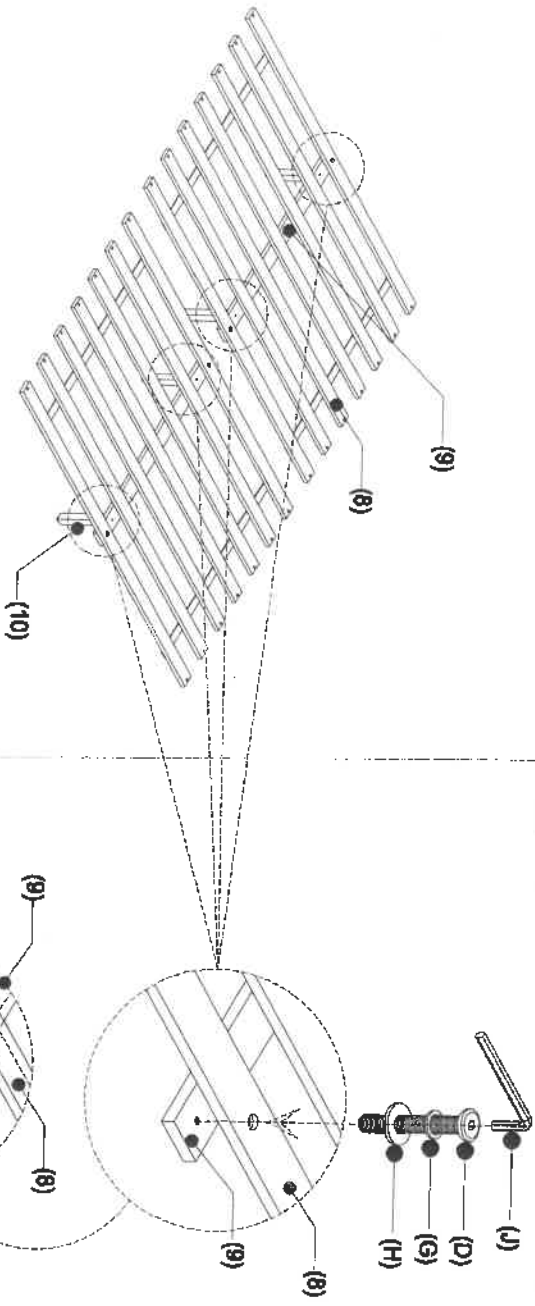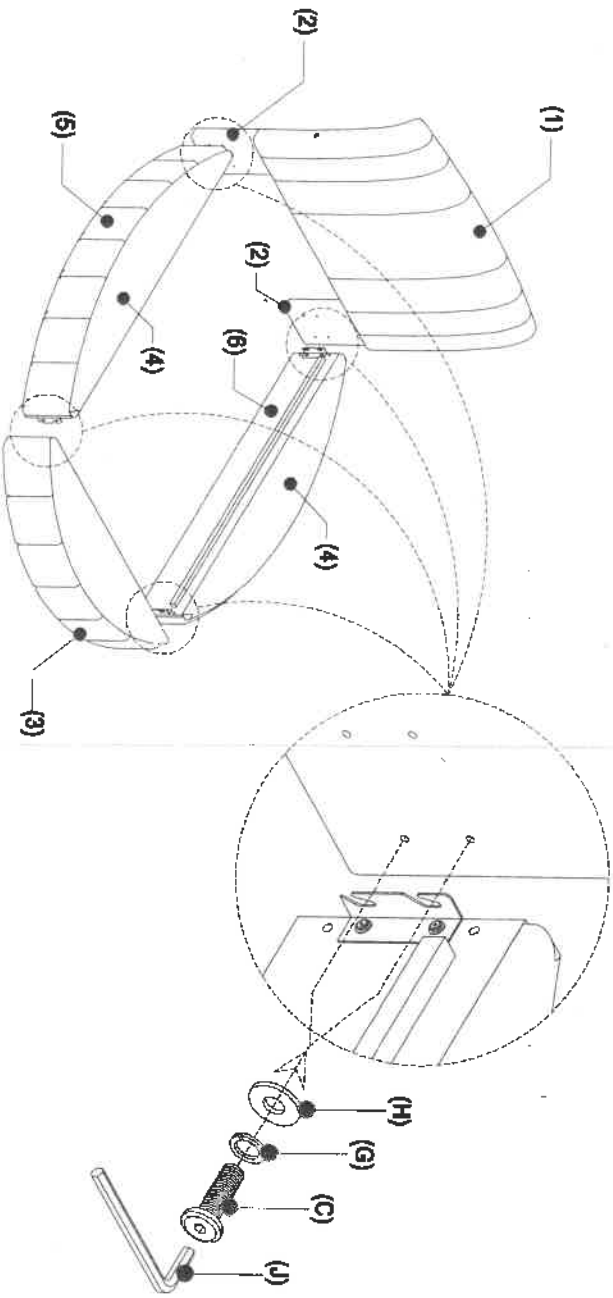

D	Bolt	⌀¼"x 35mm	4PCS
G	Spring Washer	⌀¼"	4PCS
H	Flat Washer	⌀¼"	4PCS
J	Allen Key	M4	1PC

Leveler

Step 6: Assemble Side Rail with Headboard leg (2) & Footboard (3).

C	Bolt	⌀¼"x 20mm	8PCS
G	Spring Washer	⌀¼"	8PCS
H	Flat Washer	⌀¼"	8PCS
J	Allen Key	M4x 4"L	1PC

Step 7: Place Slats roll (8), Center rails (9), Support leg (10) in the center of the bed. Attach slats roll (8) to support rails.

(8)

(K)

X28
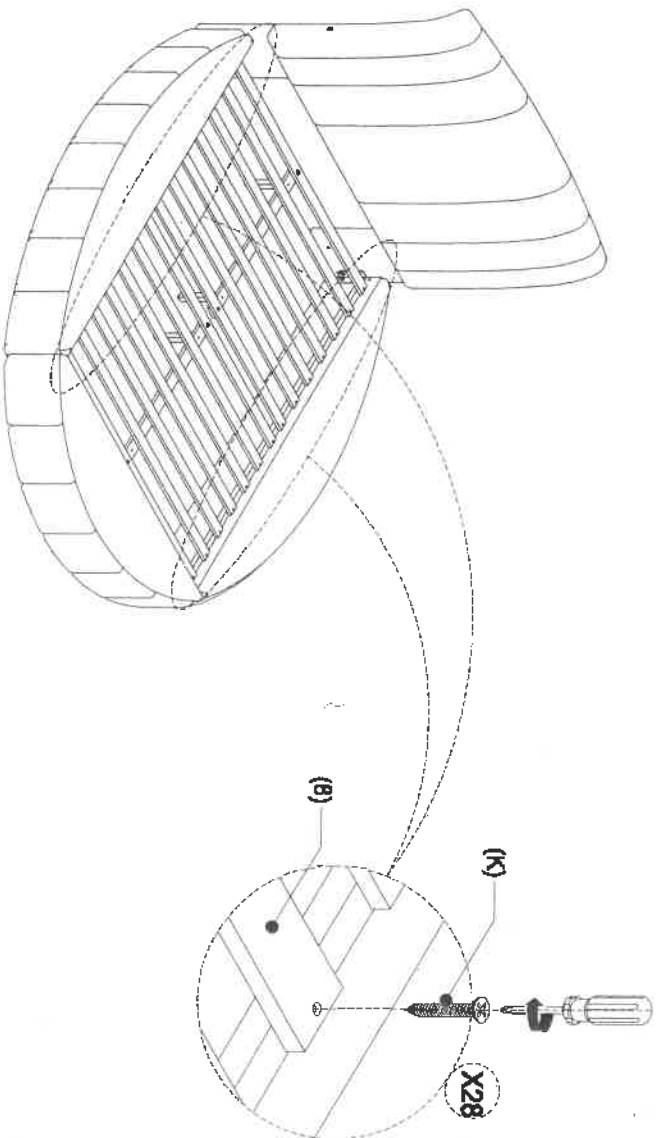
| K | Screw | | M4x 35mm | 28PCS |

Speaker Plug

Audio System

UDM ENTERTAINMENT

Pairing and connecting with a BLUETOOTH device

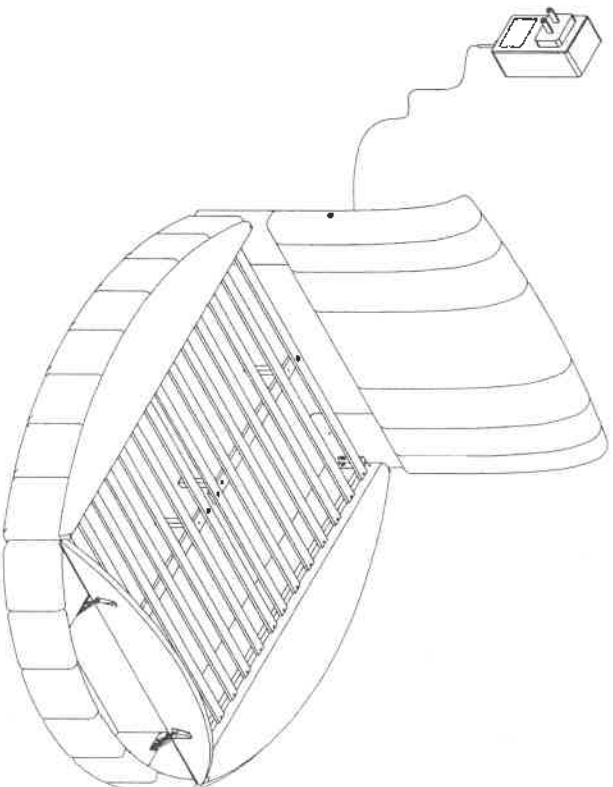1. Connect the speaker to an AC outlet.

For the first time after purchase, the speaker indicator flashes quickly in blue and the speaker enters pairing mode automatically. You will hear voice prompt "Bluetooth mode".

2. Perform the pairing procedure on the BLUETOOTH device (mobile/tablet) to detect the speaker.

When a list of detected devices appears on the display of the BLUETOOTH device, select "UDM ENTERTAINMENT".

3. Make the BLUETOOTH connection from the BLUETOOTH device, when the BLUETOOTH connection is established, the blue indicator stays on.

Troubleshooting

If the speaker does not function as expected, try the following steps to resolve the issue.

- Make sure the power supply plugged in and check the indicator light of the speaker.
- If the indicator flashes quickly, proceed to pairing mode.
- If the indicator stays on, the speakers was connected to one of the devices within 10 meters, please discount the device first, and proceed to pairing mode.

If the operations above do not work, consult your seller for replacement.

Indicator